

MorphXStar IPCPlayer Tool

USER GUIDE

(Windows)

Document Version: V1.2.0

Release Date: 2017.08

Table of the Content

1. Tool Introduction	3
2. Language Switch.....	3
3. Tool Introduction	3
3.1. Play Window.....	4
3.2. Record List.....	5
3.3. Video Control	5
3.4. Menu	6
4. About.....	6


1. Tool Introduction

The IPCPlayer tool is mainly for playing the archives recorded in SD cards or USB Flash Disk in the camera on the computer. The user can download the records from the camera through web interface or IPCManager tool, or pull out the SD card or USB Flash Disk from the camera, and play it in computer after inserting them into computer.

Please check the user manual of web interface of the camera, or user manual of IPCManager Tool for the details.


2. Language Switch

Please right click on the top windows of the tools like the below, and then click the language to select which language you prefer. (Now Chinese, English, and Russian are supported.)

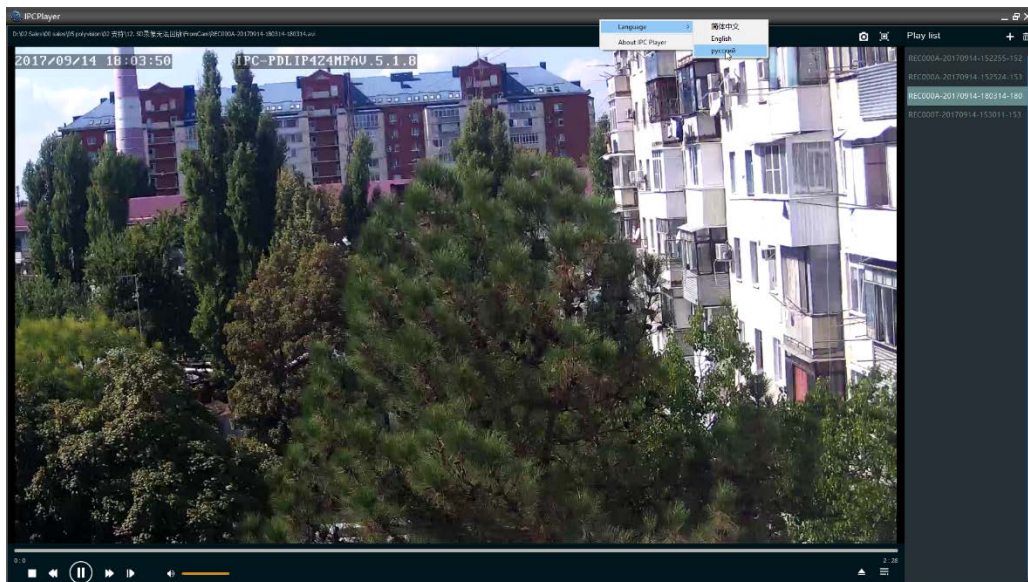

3. Tool Introduction

There are 4 zones in the main window, here is the brief introduction of each zone.

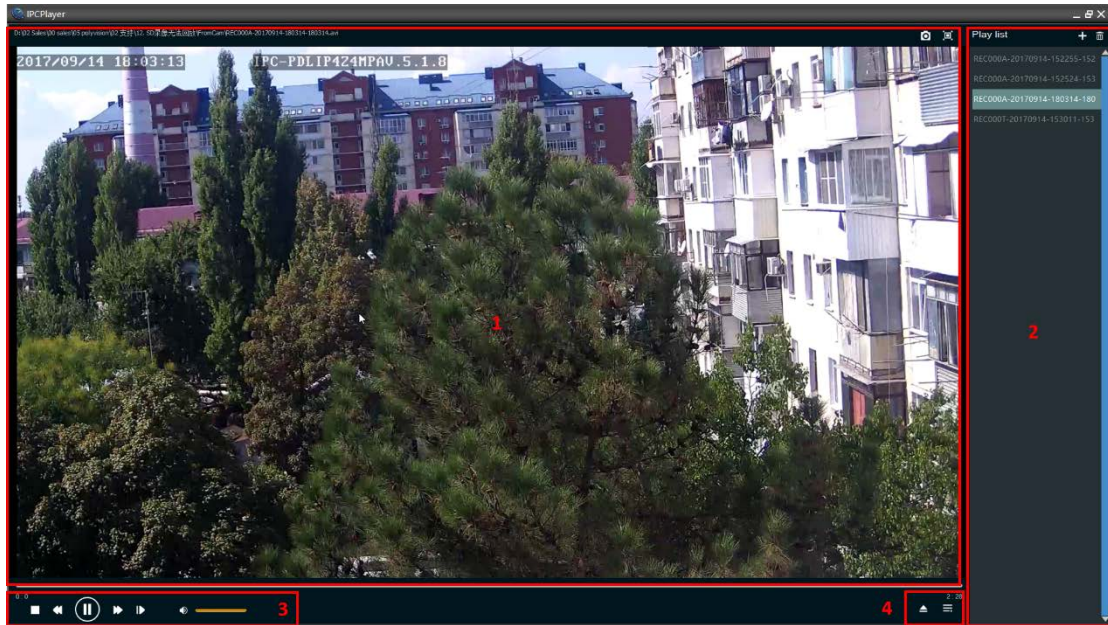

1_Play Window Zone: the play zone, the records will be shown in the zone, and there are two buttons.

2_Records List Zone: added records list. There are two buttons.

3_Video Control Bar: There are six buttons to control the video play.

4_Menu Zone: There are two menu buttons.

3.1.Play Window

The video will be shown in the window if the records is selected. And there are some status information shown on the top of the window.




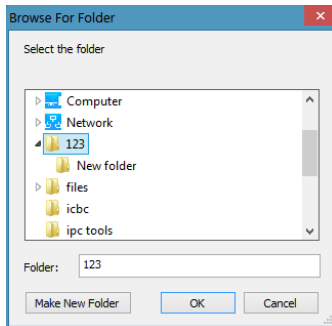
1. The current playing records file name and path.

2. Click the button to make the snapshot during the playing the archives.


3. Click the button to show the full screen, and press ESC to exit it.

3.2.Record List


Please click the  to add the batch records into the software. Select the folder which has the records.



And click the "OK", the records in the folder will be get into the software.

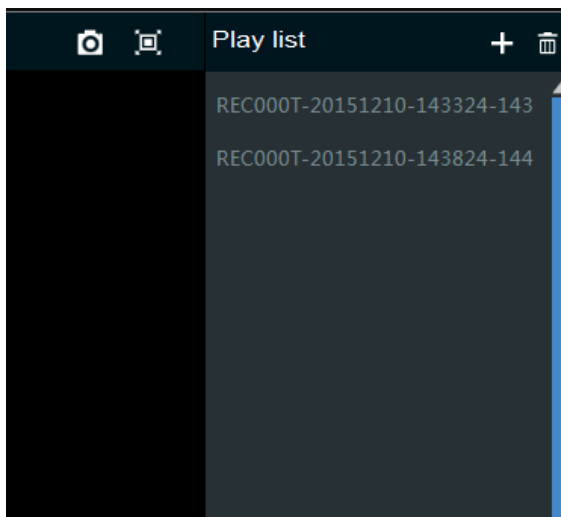

The user can select each record, and double click the record to play.

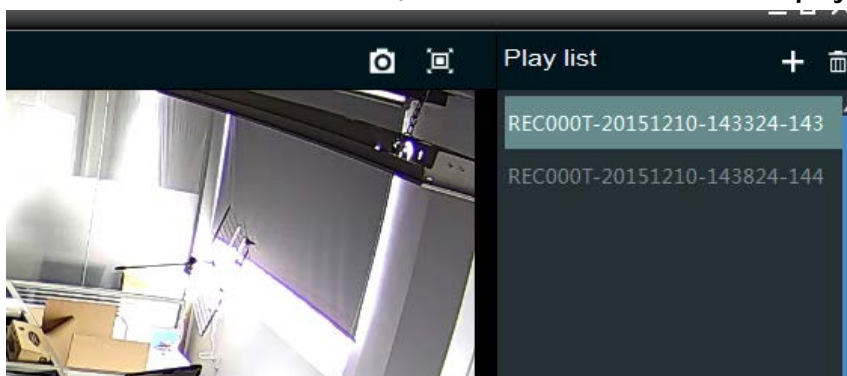

Click  to clear the list.


3.3.Video Control

There are some buttons to control the video play.

1. Playing progress

2. Stop
3. Slow play
4. Pause or Play
5. Quick Play
6. Frame Play
7. Audio control volume

There are the tips when the mouse is on the button.

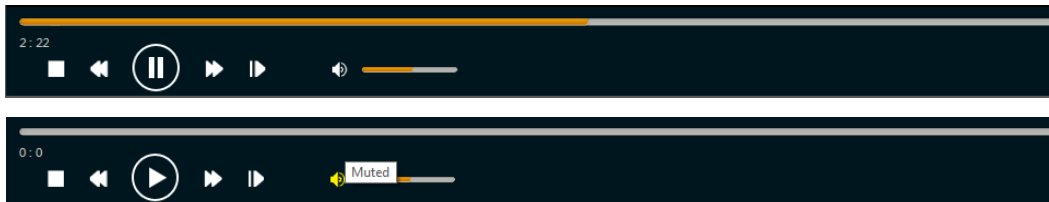

3.4.Menu

Below are the buttons descriptions:



: Open the single record file and play.



: Hidden the right records list window.

4. About

Please right click on the top windows of the tools, and select the "About IPCPlayer"

